

MC11PB (Polished Brass)
MC11W (White)



Yale[®]

DOORBOLT

CONCEALED LOCKING
DOOR BOLT

PROFESSIONAL
SERIES

INCREASED SECURITY

Suitable for timber



Suitable for
hinged door



Suitable for
french doors



Easy
install



Instructions
included

10
YEAR
WARRANTY



DOORBOLT

PROFESSIONAL SERIES

TOOLS REQUIRED

- 10mm drill bit
- 16mm drill bit
- Drill
- Phillips screwdriver
- Hammer
- Chisel
- Safety goggles

CONTENTS

- 1 x Bolt assembly
- 1 x Strike plate
- 1 x Escutcheon plate
- 1 x Key
- 6 x Screws

FEATURES

Provides increased security on timber doors

Fixing Instructions:

1 Fitting bolt



Select position for Doorbolt. Mark centre of door edge at point where bolt is to be fitted. Drill a 16mm diameter hole to a depth of 63mm. With bolt in hole mark around forend plate and recess to correct depth.

2 Locating keyhole

Mark position of keyhole on inside face, 32mm from edge of door on the centreline and drill a 10mm diameter hole to required depth. Secure bolt in position. Fit key escutcheon plate in place and test for correct operation.

3 Fitting strike plate

Close door and turn bolt with key to mark centre of bolt on door frame. Drill 16mm diameter hole in frame to a depth of 18mm. Recess strike plate and screw in place. Test for correct operation.

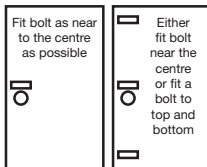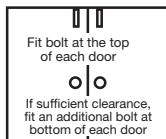

ASSA ABLOY New Zealand
6 Armstrong Road, Albany,
Auckland 0632, New Zealand

Quality, ISO 9001
Environmental, ISO 14001

For customer feedback:
nzsales@assaabloy.com



Yale The world's favourite lock
www.yalelock.co.nz

An ASSA ABLOY Group brand

ASSA ABLOY