MC14PB (Polished Brass) MC14W (White)



WINDOWBOLT

CONCEALED

PROFESSIONAL SERIES

INCREASED SECURITY

Suitable for timber



Suitable for awning

Suitable for casement



Easy install



Instructions included






WINDOWBOLT

PROFESSIONAL SERIES

TOOLS REQUIRED

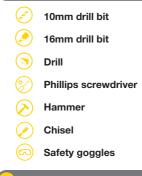

CONTENTS

- 1 x Bolt assembly
- 1 x Strike plate
- 1 x Escutcheon plate
- 1 x Key
- 6 x Screws

FEATURES

Provides increased security on timber windows

Fixing Instructions:

Fitting bolt

Select position for Windowbolt. Mark centre of window edge at point where bolt is to be fitted. Drill a 16mm diameter hole to a depth of 45mm. With bolt in hole mark around forend plate and recess to correct depth.

2 Locating keyhole

Mark position of keyhole on inside face, 23mm from edge of window on the centreline and drill 10mm diameter hole to required depth. Secure bolt in position. Fit key escutcheon plate in place and test for correct operation.

3 Fitting strike plate

Close window and turn bolt with key to mark centre of bolt on window frame. Drill 16mm diameter hole in frame to a depth of 14mm. Recess strike plate and screw in place. Test for correct operation.





The world's favourite lock www.yalelock.co.nz



ASSA ABLOY New Zealand 6 Armstrong Road, Albany, Auckland 0632, New Zealand

Quality, ISO 9001 Environmental, ISO 14001

For customer feedback: nzsales@assaabloy.com

An ASSA ABLOY Group brand



PLEASE RECYCLE